


ECF Classroom Touch Panel – Quick Reference Guide

The following quick reference guide provides an overview of the standard classroom touch panels in the ECF building. You will find information on the touch panel button layout and on the back of this sheet, a legend that provides a description of button functionality.

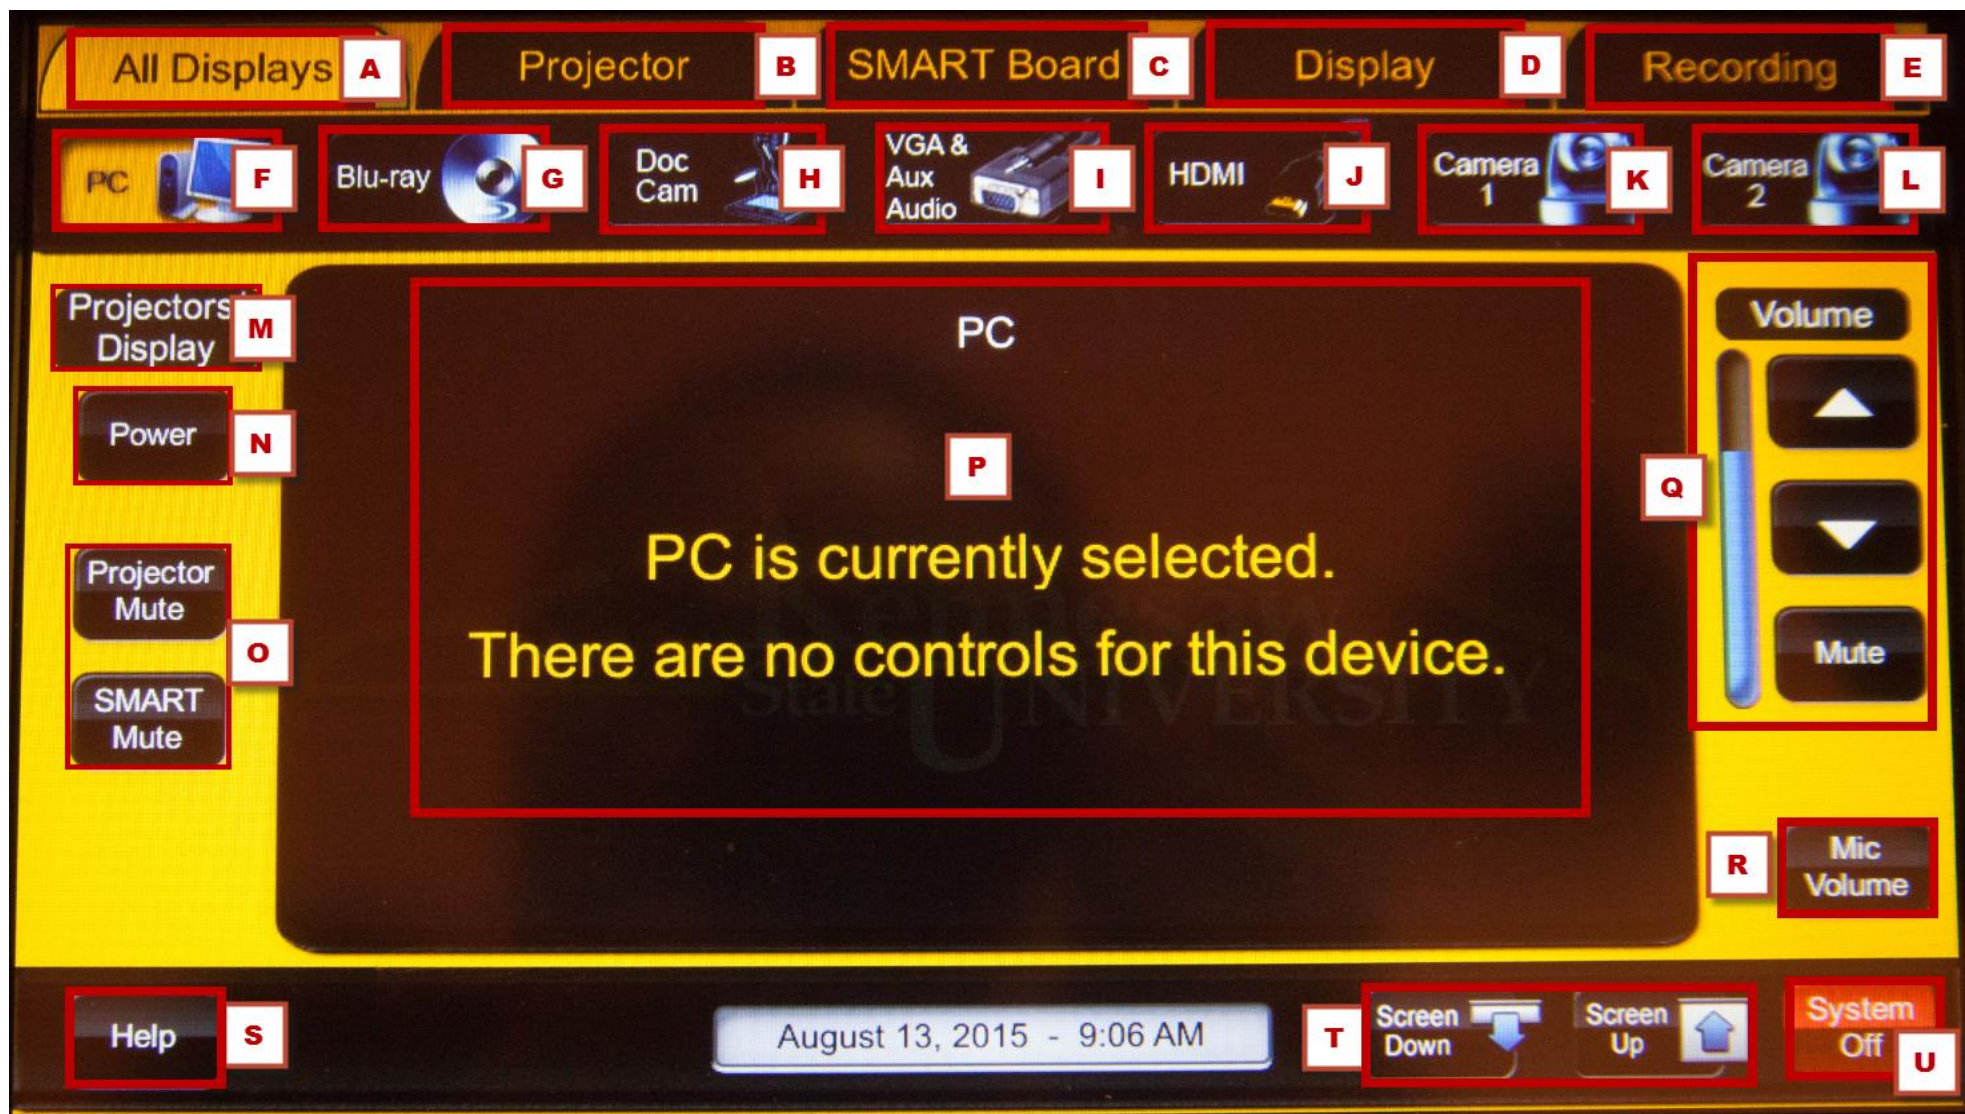

ECF Classroom Touch Panel – Quick Reference Guide

- A. All Displays** - Broadcasts selected input across all displays
- B. Projector** - Broadcasts selected input across projector only
- C. SMART Board** - Broadcasts selected input across SMART Board only
- D. Display** - Broadcasts selected input across TV Display
- E. Recording** - Provides recording options
- F. PC** - Broadcasts PC signal across selected displays
- G. Blu-ray** - Broadcasts Blu-ray signal across selected displays
- H. Doc Cam** - Broadcasts Doc-cam signal across selected displays
- I. VGA & Aux Audio** - Broadcasts VGA/Aux signal across selected displays
- J. HDMI** - Broadcasts HDMI signal across selected displays
- K. Camera 1** - Broadcasts Camera 1 signal across selected displays
- L. Camera 2** - Broadcasts Camera 2 signal across selected displays
- M. Projectors Display** - Additional projector/display settings
- N. Power** - Provides Projector/display power settings
- O. Projector/SMART Mute** - Mutes the projector and/or SMART board
- P. Input Controls** - Additional input controls. This display is context sensitive with different options appearing depending on your selected input.
- Q. Volume** - Volume controls
- R. Mic Volume** - Adjusts the room microphone volume
- S. Help** - Provides service desk contact Information and a help feature enabling you to request assistance
- T. Screen Up/Down** - Adjust the projector screen up or down
- U. System Off** - Power off the control panel